

Snabbstart: AC C-TEC 2403

2014-09-17

Elektrisk anslutning och drifttagning



Anslut till elnätet
(230 V AC)



Anslut lasten till 24 V DC
utgången på AC C-TEC



Anslut den seriella kablens till
PC'n



Anslut matningen. AC C-TEC
laddas. Lysdioderna "Betrieb
/operation" och "Ue/Vin o.K."
lyser.



AC C-TEC fulladdad. Lysdioder-
na "Betrieb/Operation", "Ue/Vin
o.K." und "U_c/V_{cap.} >" lyser.

Shutdown-Software



TECControl-Software automatiserar avstängning i händelse av strömavbrott och kontrollerad omstart av systemet då strömmen är tillbaka. Okontrollerade processtopp undviks. Fråga efter mer information.

Egenskaper

- Minskad kabeldragning tack vare integrerad strömförsörjning och energilagring
- Kompakt design, monterad i en kapsling
- Underhållsfria
- Skydd mot djupurladdning, obegränsad lagringsmöjlighet
- Stort temperaturområde -20 ° C ... 60 ° C
- Inga gaser, så användning i slutna höljen möjliga


Varning! Beakta säkerhetsanvisningarna i installationsanvisningen.
Installation ska endast utföras av elektriker.
Denna snabbstartsguide är endast ett stöd.

Tel. 08-449 80 80
Fax. 08-449 80 89
www.elrond.se
info@elrond.se

Quickstart: AC C-TEC 2403


Electrical Connection and Start-up

1.

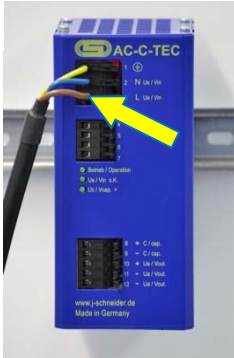

Connect the **AC C-TEC** to the mains (230 V AC)

2.

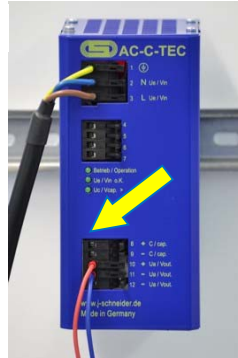

Connect the load to the buffered 24 V DC output of the **AC C-TEC**

3.



Connect the serial line to the PC

4.



Switch on the power supply. The charging process starts. The LEDs „Betrieb/Operation“, and „Ue/Vin o.K.“ illuminate

5.



AC C-TEC is completely charged. The LEDs „Betrieb/Operation“, „Ue/Vin o.K.“ and „Uc/Vcap >“ illuminate

Shutdown-Software



The TECControl-Software automates the system-shutdown at power failure and the controlled system-restart after power recovery. Please ask for further information!

Characteristics

- Reduced wiring due to integrated power supply and energy storage
- Compact design, assembled in one housing
- Maintenance-free
- Deep discharge protection, thus unlimited storage possible
- Big temperature range -20°C ... 60°C
- No gas emission, so use in closed housings possible

ATTENTION! The safety notes of the operating instructions have to be regarded. Installation and wiring work may only be carried out by electricians. The sheet „Quickstart“ is only a support.

Tel 08-449 80 80
Fax 08-449 80 89
www.elrond.se
info@elrond.se