

Snabbstart: AC C-TEC 2403

2020-05-26

Elektrisk anslutning och drifttagning



Anslut till elnätet
(230 V AC)



Anslut lasten till 24 V DC
utgången på **AC C-TEC**



Anslut den seriella kabeln till
PC'n

4.



Anslut matningen. **AC C-TEC**
laddas. Lysdioderna "Betrieb/
operation" och "Ue/Vin o.K." lyser.

5.



AC C-TEC fulladdad. Lysdioderna "Betrieb/Operation", "Ue/Vin o.K." och "Uc/Vcap. >" lyser.

Shutdown-Software



TECControl-Software automatiserar avstängning i händelse av strömbrott och kontrollerad omstart av systemet då strömmen är tillbaka. Okontrollerade processstopp undviks. Fråga efter mer information.

Egenskaper

- Minskad kabeldragning tack vare integrerad strömförsörjning och energilagring
- Kompakt design, monterad i en kapsling
- Underhållsfria
- Skydd mot djupurladdning, obegränsad lagringsmöjlighet
- Stort temperaturområde -20 ° C ... 60 ° C
- Inga gaser, så användning i slutna höljen möjliga

Varning! Beakta säkerhetsanvisningarna i installationsanvisningen.

Installation ska endast utföras av elektriker.
Denna snabbstartsguide är endast ett stöd.

Tel. 08-449 80 80

www.elrond.se
info@elrond.se



ELROND
Regulatorvägen 9A, SE-141 49 Huddinge
UPS, Åskskydd www.elrond.se

Quickstart: AC C-TEC 2403

Electrical Connection and Start-up



Connect the **AC C-TEC** to the mains
(230 V AC)

Connect the load to the buffered
24 V DC output of the **AC C-TEC**

Connect the serial line to the PC

4.



5.



Switch on the power supply.
The charging process starts.
The LEDs „Betrieb/Operation“,
and „Ue/Vin o.K“ illuminate

AC C-TEC is completely charged.
The LEDs „Betrieb/Operation“,
„Ue/Vin o.K.“ and „Uc/Vcap >“
illuminate

Shutdown-Software



The TECControl-Software automates the system-shutdown at power failure and the controlled system-restart after power recovery.
Please ask for further information!

Characteristics

- Reduced wiring due to integrated power supply and energy storage
- Compact design, assembled in one housing
- Maintenance-free
- Deep discharge protection, thus unlimited storage possible
- Big temperature range -20°C ... 60°C
- No gas emission, so use in closed housings possible

ATTENTION! The safety notes of the operating instructions have to be regarded. Installation and wiring work may only be carried out by electricians. The sheet „Quickstart“ is only a support.

Tel 08-449 80 80

www.elrond.se
info@elrond.se