



Elektrisk anslutning och drifttagning



1. Anslut till elnätet (230 V AC)

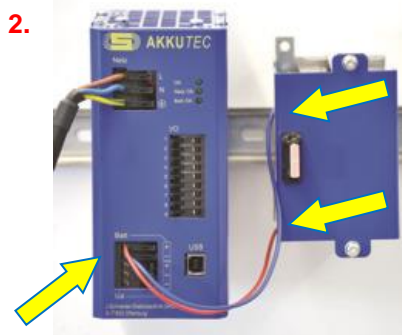

2. Anslut batteriet till batterianslutningarna på AKKUTEK

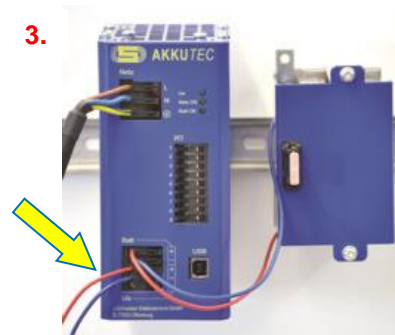

3. Anslut lasten till 24 V DC utgången på AKKUTEK



4. Inkoppling ingångar / utgångar (temp. sensor, avstängning, nätverk ok, batt ok)




5. Anslut USB kabeln till PC'n om mjukvara används.



6. AKKUTEK fulladdat. Lysdioderna "Vout", "Network OK" och "Batt OK" tänds.

Parameter-Software

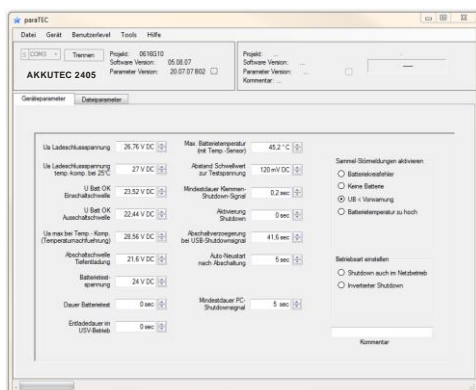

Med programvaran **paraTEC** kan du ställa in parametrar som utspänning, tillåtet spänningsområde, generella fel osv. Fråga efter mer information.

Shutdown-Software




TECControl-Software automatiserar avstängning i händelse av strömavbrott och kontrollerad omstart av systemet då strömmen är tillbaka. Okontrollerade processtopp undviks. Fråga efter mer information.

Varning! Beakta säkerhetsanvisningarna i installationsanvisningen.
Installation ska endast utföras av elektriker.
Denna snabbstartsguide är endast ett stöd.


Tel. 08-449 80 80

www.elrond.se
info@elrond.se


Electrical Connection and Start-up

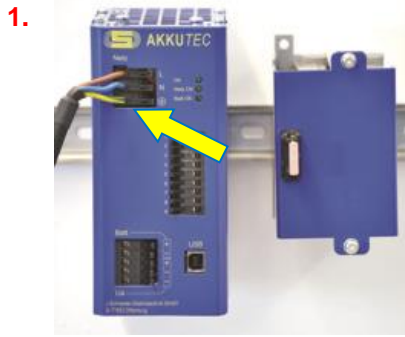

Connect the **AKKUTEK** to the mains (230 V AC)

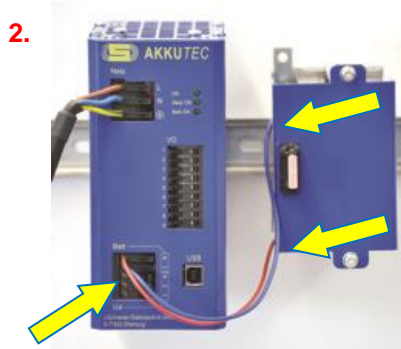

Connect the battery to the battery connector of the **AKKUTEK**

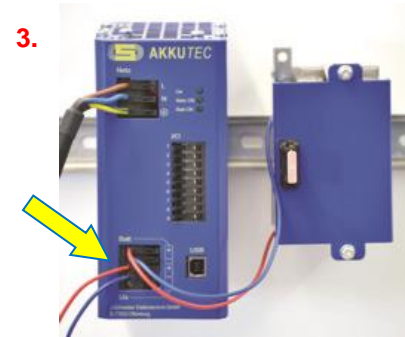

Connect the load to the buffered 24 V DC output of the **AKKUTEK**



Wiring of the inputs/outputs (Temperature sensor, Shutdown, Mains ok, Batt ok)




Connect the USB-cable to the PC



AKKUTEK is completely charged. The LEDs „Ua“, „Netz OK“ and „Batt OK“ illuminate

Parameterizing-Software

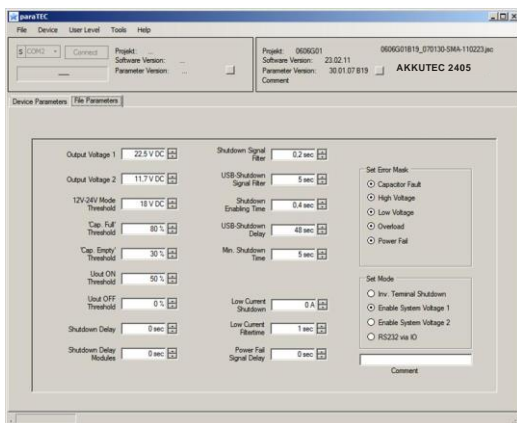

Device parameters such as output voltage, permissible voltage range, general error a.s.o. can be adjusted with the **paraTEC** software.

Please ask for further information!

Shutdown-Software



The **TECControl**-Software automates the system-shutdown at power failure and the controlled system-restart after power recovery.

Please ask for further information!

ATTENTION! The safety notes of the operating instructions have to be regarded. Installation and wiring work may only be carried out by qualified electricians. The sheet „Quickstart“ is only a support.

Tel 08-449 80 80
 Fax 08-449 80 89
 www.elrond.se
 info@elrond.se