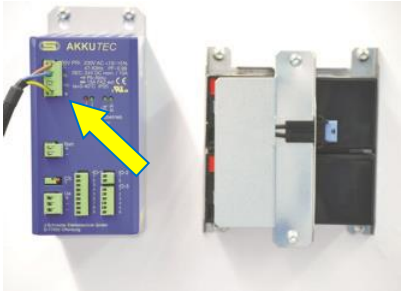
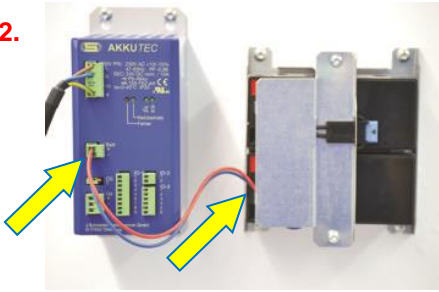
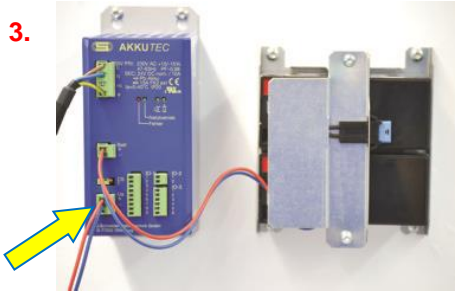
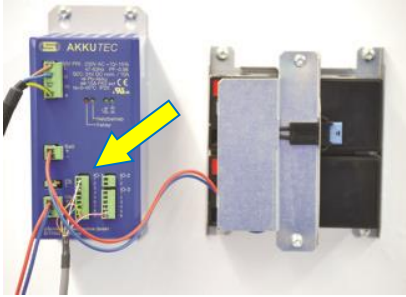



Elektrisk anslutning och drifttagning

- 

Anslut till elnätet (230 V AC)
- 

Anslut batteriet till batterianslutningarna på **AKKUTEK**
- 

Anslut lasten till 24 V DC utgången på **AKKUTEK**
- 

Anslut RS232 kabeln (Art. Nr. PSDP0324G0100X)
- 

Anslut matningen. Batteriet är OK och laddas. Lysdioderna "Nät" och "Batterispänning" lyser.

Shutdown-Software



TECControl-Software automatiserar avstängning i händelse av strömavbrott och kontrollerad omstart av systemet då strömmen är tillbaka. Okontrollerade processtopp undviks. Fråga efter mer information.

Egenskaper

- Batteriladdare med I / U laddningskarakteristik
- Mikroprocessorstyrd batteri övervakning
- Temperatursynkronisering av laddningsspänningen med extern sensormodul
- Kräver mindre kablage tack vare integrerat nätaggregat

Varning! Beakta säkerhetsanvisningarna i installationsanvisningen.


Installation ska endast utföras av elektriker. Denna snabbstartsguide är endast ett stöd.

Tel. 08-449 80 80


www.elrond.se
info@elrond.se

Quickstart: AKKUTEK 2410-0 + NBBH 2407


Electrical Connection and Start-up

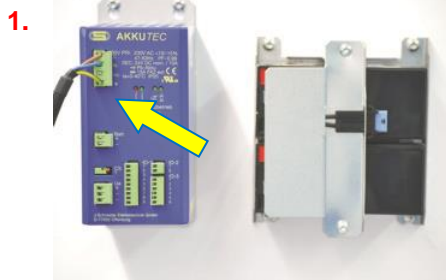


Connect the **AKKUTEK** to the mains (230 V AC)

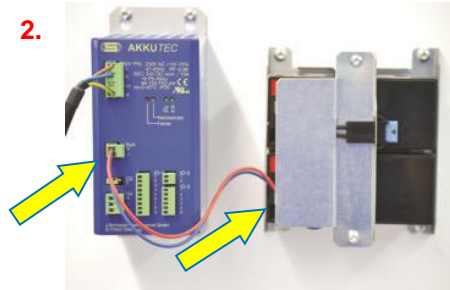

Connect the battery to the battery connector of the **AKKUTEK**

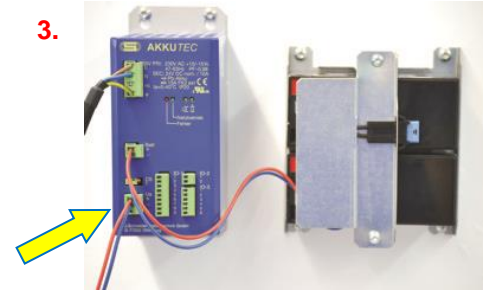

Connect the load to the buffered 24 V DC output of the **AKKUTEK**

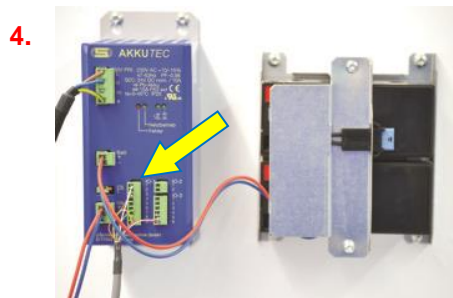

Connect the RS232 interface cable.
(Art. No. PSDP0324G100X)



Switch on the power supply. The battery is fine and the charging process starts. The LEDs „Netzbetrieb“ and „battery voltage“ illuminate.

Shutdown-Software



The **TECControl**-Software automates the system-shutdown at power failure and the controlled system-restart after power recovery.

Please ask for further information!

Characteristics

- Battery charger with I/U-charging characteristics
- Microcontroller-based battery management
- Temperature adapter of the charging voltage by external sensor module
- Low wiring due to integrated power supply

ATTENTION! The safety notes of the operating instructions have to be regarded. Installation and wiring work may only be carried out by electricians. The sheet „Quickstart“ is only a support.

Tel 08-449 80 80

www.elrond.se
info@elrond.se

